



MW600


Extended User guide

Sony Ericsson
make.believe

Contents

1.....	3
2.....	4
Headset overview.....	5
Display icons.....	6
Introduction.....	7
Charging.....	8
Turning on and off.....	9
Pairing the headset.....	10
Pairing the headset with a phone.....	10
Pairing the headset with another device.....	10
Replacing devices.....	10
Adjusting the volume.....	11
Calling.....	12
Calling using voice commands.....	12
Transferring sound.....	12
Using another device for calling.....	12
Listening to music.....	13
Using another device as a music source.....	13
Listening to the radio.....	14
Resetting the headset.....	15
Battery.....	16
Troubleshooting.....	17
Redial does not work.....	17
I cannot answer a second call.....	17
Voice commands do not work.....	17
The music does not play in the headset.....	17
The radio does not play in the headset.....	17
Touch volume control does not work	17
The headset is automatically turned off.....	17
Unexpected behaviour.....	17
No connection to the phone.....	17
FCC Statement.....	18
Industry Canada Statement.....	19
Declaration of Conformity for MW600	20

1

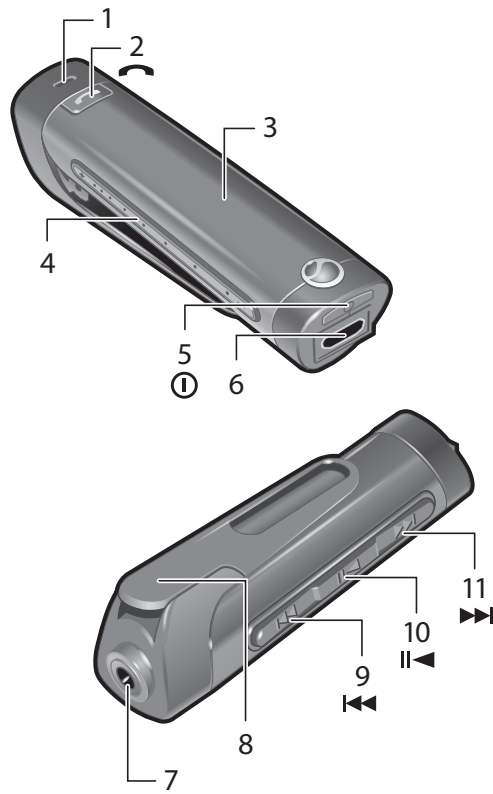




















Headset overview

- | | |
|----|----------------------|
| 1 | Microphone |
| 2 | Call key |
| 3 | Display |
| 4 | Touch volume control |
| 5 | On/off key |
| 6 | Charger connector |
| 7 | Headphone connector |
| 8 | Clip |
| 9 | Next key |
| 10 | Play/pause key |
| 11 | Previous key |

Display icons

	Battery status
	Battery charging
	The headset is on
	The headset is ready to be paired with another device
	Incoming call
	Outgoing call
	Ongoing call
	Voice activated dialling is on
	Adjusting the music volume
	Adjusting the voice volume
	Music source selection menu
	Calling device selection menu
	Music mode selection menu
	Gaming mode
	Music mode
	FM radio mode
	The microphone is muted

Introduction

The Hi-Fi Wireless Headset with FM Radio MW600 lets you stay in control of your incoming and outgoing phone calls. You can listen to the radio and enjoy gaming with PSP® system or PC. You can also enjoy stereo audio from a phone or other Bluetooth device, such as a computer or a portable music player. During calls, the music automatically pauses and starts playing again when the call ends.

Charging

Before using the headset for the first time, you need to charge it with the supplied charger for 8 hours (see figure 2). The normal charging time is 2.5 hours. Use Sony Ericsson chargers only.

- ! It is not possible to use the headset during charging.

Turning on and off

To turn on the headset

- Press and hold down ① until the display turns on.

To turn off the headset

- Press and hold down ① until the display turns off.

Pairing the headset

Pairing the headset with a phone

To use the headset with a phone, you need to pair the headset with the phone. After successful pairing, the headset connects automatically to the phone as soon as the headset is turned on and within range.

To pair the headset with a phone

- 1 Make sure the headset is turned off.
- 2 Turn on the Bluetooth function in the phone. For instructions, see the phone User guide.
- 3 Turn on Bluetooth visibility in the phone. This makes the phone visible to other Bluetooth devices.
- 4 Place the phone within 20 cm (8 inches) of the headset.
- 5 Press and hold down **(i)** on the headset for about 5 seconds until the pairing indicator appears on the display.
- 6 Auto pairing in your phone: When asked to add the MW600, follow the instructions that appear.
- 7 Normal pairing in your phone: Search for and add a new device.
- 8 If a passcode is required, enter 0000.

Pairing the headset with another device

To use the headset with another device, such as a gaming device or a PC, you need to pair the headset with that device. After successful pairing, the headset connects automatically to the device as soon as the headset is turned on and within range.

To pair the headset with another device

- 1 Make sure the headset is turned off.
- 2 Turn on the Bluetooth function in the other device. For instructions, see the User guide of the other device.
- 3 Place the other device within 20 cm (8 inches) of the headset.
- 4 Press and hold down **(i)** on the headset for about 5 seconds until the pairing indicator appears on the display.
- 5 In the other device: Search for and add a new device.
- 6 If a passcode is required, enter 0000.

Replacing devices


When all three paired devices are activated, you can replace one device with another.

To replace a paired device

- Use the touch volume control to select a device.

Adjusting the volume

To change the ear speaker or music volume

- 1 During a call, or when listening to music or the FM radio, swipe your finger along the touch volume control to enable volume control.
 - 2 Swipe the touch volume control again to adjust the volume.
-  For repeated volume adjustment hold down your finger at the end of the touch volume control after a swipe.

Calling


To make a call

- Dial the number using the phone keys. The call is automatically activated in the headset.

To end a call

- Press  briefly.

To make a call using voice commands

- Press  briefly, wait for a beep and then say the command.


To answer a call

- A beep indicates an incoming call. Press  briefly.

To reject a call

- Press and hold down  until you hear a beep.

To re-dial a number

- Double-click .

To answer a second call

- Press . The ongoing call is put on hold.

To switch between two calls

- Press and hold down  until you hear a beep.

To mute the microphone during a call

- Press and hold down  until you hear a beep.

Calling using voice commands

Voice commands can be useful when you are using the headset. For more information on voice commands, and if your phone supports calling using voice commands, see *Voice control* in the phone User guide.

Transferring sound

To transfer the sound from the headset to the phone

- See *Transferring sound to and from a Bluetooth handsfree* in the phone User guide.

To transfer the sound from the phone to the headset


- During a call on the phone, press .

Using another device for calling

Before you can use another device for calling, the headset has to be paired with the device. The headset can be paired with up to three devices. Every time a phone is paired, this device becomes the calling device automatically.


- ! Only one of the paired devices can be selected as a calling device at the same time.

To select a calling device



- 1 Press and hold down  until the calling device selection menu appears.
- 2 Use the touch volume control to select a calling device.

Listening to music

To listen to music

- 1 Start the media player in your phone.
- 2 To start and pause the music, press  on the headset.

To move between tracks

- When you listen to music, press  or .

To move within a track


- Press and hold down  or  until you reach the desired position.

Using another device as a music source

Before you can listen to music from another device, the headset has to be paired with the device. The headset can be paired with up to three devices. When pairing a gaming device or a PC, this device becomes the music source automatically.

- ! Only one of the paired devices can be selected as a music source at the same time.


To select a music source

- 1 Press and hold down  until the music source selection menu appears.
- 2 Use the touch volume control to select a music source.

Listening to the radio

! When listening to the radio, you can only change the volume from the headset.

To turn on the radio



- 1 Press and hold down  until the audio device selection menu appears.
- 2 Use the touch volume control to select the FM radio. The FM radio is automatically started.

💡 When the FM radio is the selected audio device, press  to turn the FM radio on and off.

To turn off the radio

- Press .

To search for a radio station

- Press and hold down  or .


To change the frequency manually

- Press  or  to move up or down with 100kHz.

Resetting the headset

Reset the headset if it behaves unexpectedly. Resetting the headset removes all information about paired devices.

To reset the headset

- 1 Make sure the headset is turned off.
- 2 Press and hold down ① until the pairing indication appears.
- 3 Simultaneously press and hold down ① and  until the headset turns off.

Battery

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times. When the battery level is low, you hear a low beep. If you do not charge the headset, it automatically turns off after 10 minutes.

To check the battery status

- Activate the display to check the battery level.

Troubleshooting

Redial does not work

- Make sure the call list in the phone is not empty.
- Make sure the correct calling device is selected.
- Make sure your phone or other device supports the Bluetooth handsfree profile.

I cannot answer a second call

- Make sure your phone supports the Bluetooth handsfree profile.
- Make sure the correct calling device is selected.

Voice commands do not work

- Make sure the voice commands are enabled and recorded in your phone before you start using them.
- Make sure the correct calling device is selected.
- Make sure your phone supports the Bluetooth headset profile.

The music does not play in the headset

- Make sure your phone or other device is paired with the headset. You may have to restart the media player and select to use the headset.
- Make sure the correct music source is selected.

The radio does not play in the headset

- Make sure the FM radio is selected as the music device.

Touch volume control does not work

First enable touch volume control by swiping the whole touch volume control. Then swipe again to change the volume.

The headset is automatically turned off

- The battery level is too low. You hear a beep approximately 10 minutes before the headset turns off. Charge the battery.
- The headset turns off if you do not pair it with the phone within 10 minutes.

Unexpected behaviour

- Reset the headset.

No connection to the phone

Make sure the headset is charged and within range of the phone. We recommend a maximum distance of 10 metres (33 feet) with no solid objects in between. Check or reset the Bluetooth settings in the phone. Pair the headset with the phone again.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for MW600

We, **Sony Ericsson Mobile Communications AB** of

Nya Vattentorget

SE-221 88 Lund, Sweden


declare under our sole responsibility that our product

Sony Ericsson type DDA-0002029

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards **EN 300 328:V1.7.1**, **EN 301 489-7:V1.3.1**, **EN 301 489-17:V2.1.1** and **EN 60 950-1:2006** following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC**.

Lund, November 2009

CE 0682

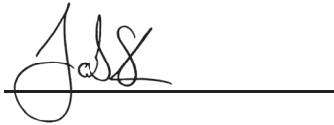

Jacob Sten,

Head of Product Business Unit Accessories

We fulfil the requirements of the R&TTE Directive (1999/5/EC).



Sony Ericsson MW600

Prior to use, please read the *Important information* leaflet separately provided.

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009

Publication number: 1236-6504.1

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo is a trademark or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony and "make.believe" are trademarks or registered trademarks of Sony Corporation.

PSP is a registered trademark of Kabushiki Kaisha Sony Computer Entertainment TA Sony Computer Entertainment Inc..

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.